

INSTALLATION INSTRUCTIONS

Universal under seat keyboard mount MH-3001


TOOLS REQUIRED:

Metric and standard socket set

Screwdriver

HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART#</u>
1	Forklift mount base	CM009432
1	Flex arm	C-FAM-201
2	5/16" nut	GSM30007
1	5/16" x 1.25" Flat head bolt	CM86503
3	10-32 Nylock nut	GSM30015
3	10-32 x 1/2" screw	GSM33118
1	Washer for pivot arm	CM93685
1	Pivot arm	CM93672-2

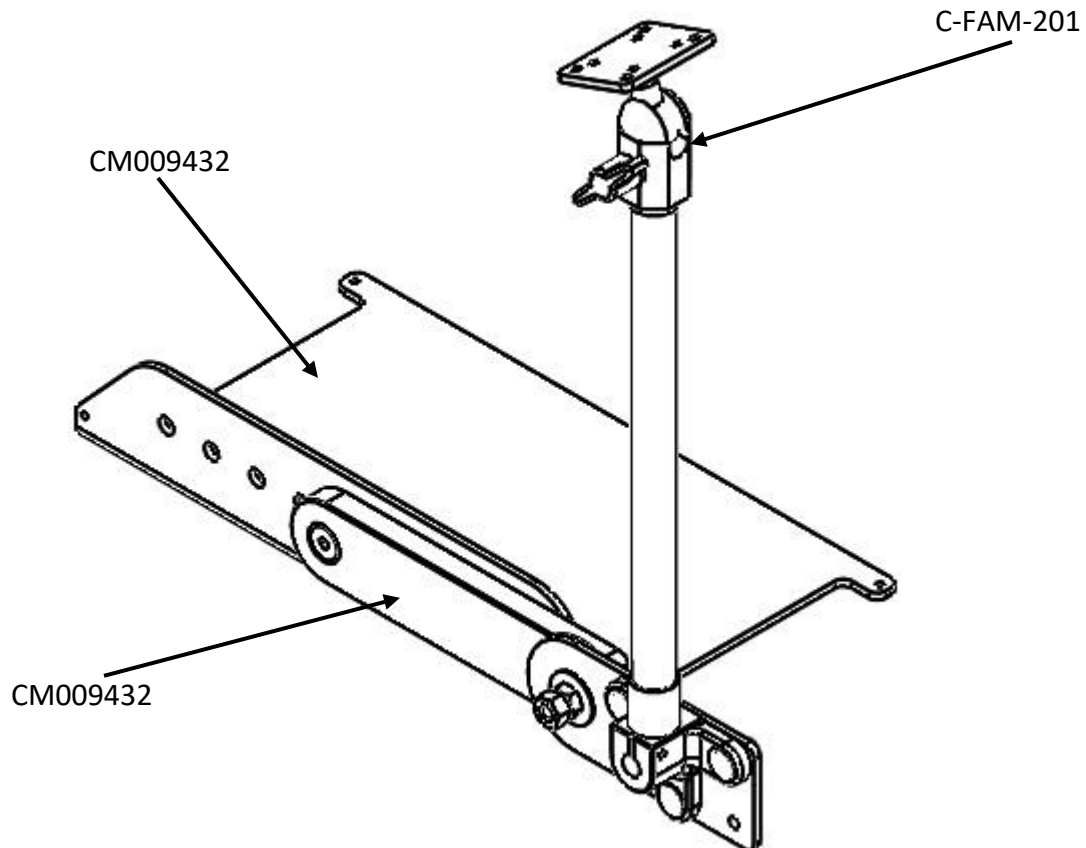


Always!

- Read all instructions before installing any Havis, Inc. products.
- **Check for obstructions (Wires, brake lines, fuel tank, etc.) before drilling any holes!**
- Use hardware provided with install kit



Lift the seat and engine cover.

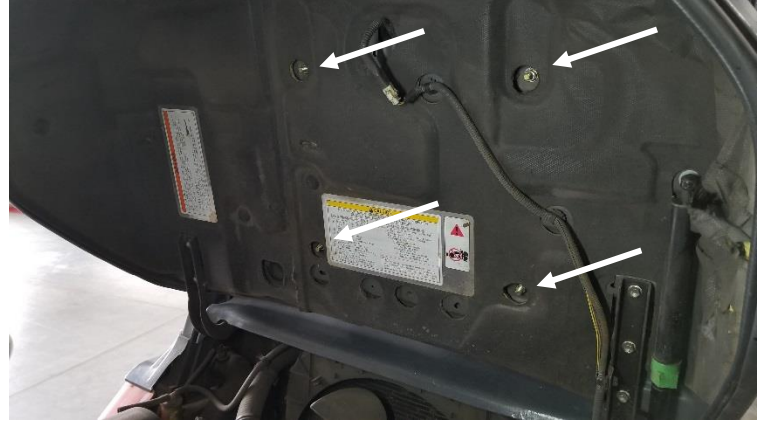

Locate hardware for seat rail. Loosen the hardware on the side you are NOT mounting the keyboard mount too and fully remove the side you are.




Lift seat base off of engine cover.



Slide the keyboard mount under the seat rail. Tighten all seat hardware and close engine cover.



Confirm location for swing arm and tighten hardware.

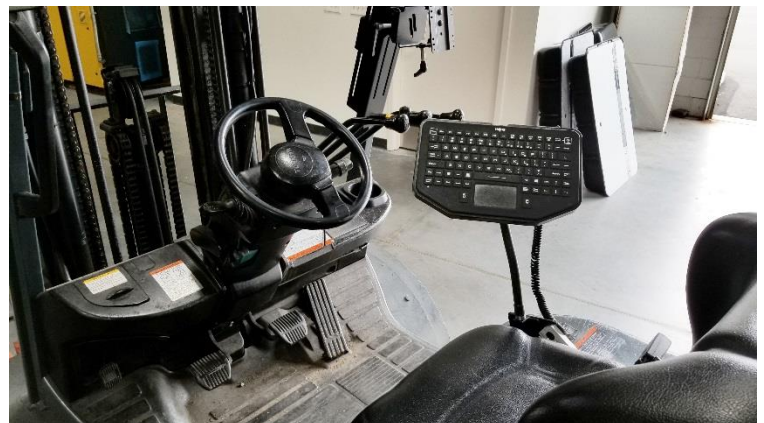

Attach flex arm and keyboard. Installation is now complete.